

**DIRECTIONS
FOR KEEPING YOUR WEAREVER PACEMAKER FOUNTAIN PEN IN
PERFECT WRITING CONDITION**

TO FILL—Remove end of holder and completely submerge pen point in the ink until the section is partially submerged (as illustrated). Then press button down as far as it will go, then release. Leave pen in ink for ten seconds to assure the maximum amount of ink that the ink sac will hold. Then withdraw, replace end and the pen will be ready for use.

TO CLEAN—Do exactly the same as when filling, using cold water instead of ink. Remove all water from pen before refilling with ink. A pen should be cleaned every month to insure good writing.

CAUTION—The button should not be pressed unless pen is held over ink stand. Never remove the ink sac from holder as it will damage the sac.

NOTE—When ink flows too freely the pen requires refilling. When the pen is not in use, always keep cap tightly screwed.



DAVID KAHN, Inc.

NORTH BERGEN, N. J.

Japan Pen Importer
U.S. PAT. & T. REG'D.

Made in U.S.A.

WEAREVER *PACEMAKER* **FOUNTAIN
PEN**

Guarantee

- This Guarantee covers the replacement, free of charge, of any part of the pen which shows a defect in construction, workmanship or material.

We also guarantee to maintain in perfect working condition any WEAREVER PACEMAKER FOUNTAIN PEN sent to us, free of charge, except for a 25c postage and handling charge.

Any part broken by accident or ill usage will be replaced at prevailing parts prices, plus a 25c charge for handling and postage.

The Wearever Pacemaker Fountain Pen is a precision instrument and must never be taken apart.

★Reg. U. S. Pat. Off.